
LTECH



Q Series Remote

Manual www.ltech-led.com For: Q1/Q2/Q4/Q5

 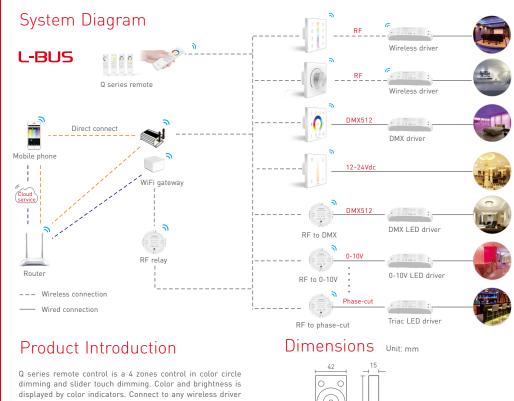


 
within effective distance and keep the effect in sync. Working with F4-5A, F5-DMX-4A and touch panel, etc.

Parameters


Remote Type: 4 zones control Working Temp.: -20°C~55°C Power Supply: 2 AAA batteries Package: L166×W47×H22(mm)


Wireless Type: RF 2.4GHz Weight(G.W.):






Key Functions

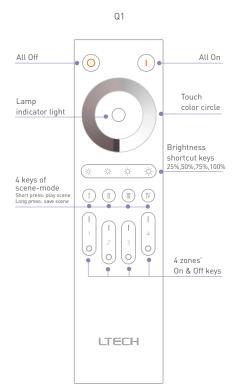

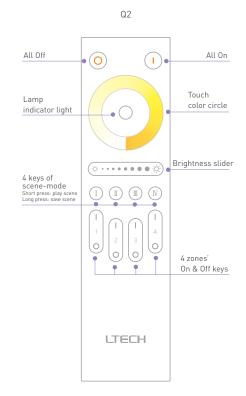

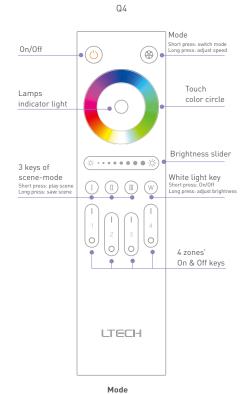

1. Static red

4. Static yellow 5. Static purple

2. Static green

- 8. RGB jumping 7. Static white 10. RGB color smooth 11. 7 colors smooth
- 3. Static blue 6. Static cyan 9. 7 Colors jumping

(only turn off RGB)

Mode Ω_n/Ω_{ff} Lamp Touch color circle indicator light Color temperature RGB adjusting key slider 2 keys of scene-mode
Short press: play scene
Long press: save scene CT adjusting key Short press: On/Off CT Long press: adjust CT brightness 0 4 zones' On & Off keys LTECH

Mode2. Green blue jumping

8. Red blue smooth

3. Red blue jumping

9. RGB smooth

- Red green jumping
 RGB jumping
- 7. Green blue smooth
- 10. 7 Colors smooth

Q5

Match Code and Clear Code

Q series remote match with wireless driver:

Q1/Q2/Q4 works with F series wireless driver and EBOX wireless module.

Q5 works with F5-DMX-4A wireless driver.

Method 1:

1. Power off the wireless driver, and then hold down the matching zone's "ON" key on the remote.



2. Power on the wireless driver



the lamps which connected with the wireless driver flicker several times and then stop flicking, the buzzer long beep, match successfully.

Method 2:

1. Short press "ID learning button" on wireless driver. the lamps flicker, please complete step 2 within 15s.



2. Long press the matching zone's "ON" key on the remote, the lamps stop flicking, match successfully.



Q series remote match with touch panel:

Q1 works with touch panel: E1/E1S/EX1/EX1S/EX5.

Q2 works with touch panel: E2/EX2/EX6.

Q4 works with touch panel: E3/E3S/E4/E4S/EX3/EX3S/EX4/EX4S

EX7/EX7S/EX8/EX8S.

Q5 works with touch panel: E5S.

1. Long press 🖰 on touch panel until indicator lights flicker.



2. Long press the matching zone's "ON" key on remote, the indicator lights of touch panel stop flicking, match successfully.



* Please match/clear code when 🖰 indicator light of panel is white.

Match code between remotes:

Assuming that B match up with A.

1. Short press the top two keys of B remote simultaneously, the indicator light keeps on after release.



2. Then press any key on A remote within 5s. When the indicator light of B turns off, match successfully.



* Only the same model remote can match with each other.


Clear code

Press the top two keys on remote simultaneously for about 6 seconds, the indicator light flicker twice, deactivated the matching successfully.




Wiring Diagram

Remote works with wireless driver.

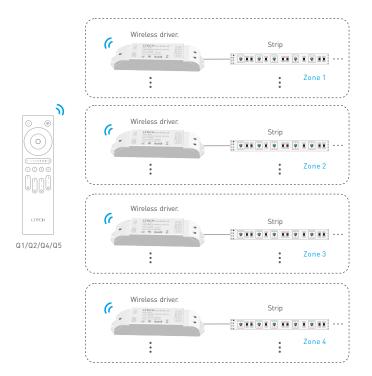

Remote works with touch panel.

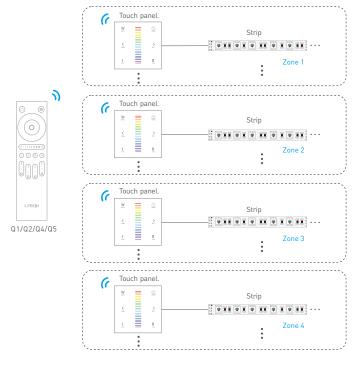

* No further notice if any changes in the manual. Product function depends on the goods. Please feel free to contact your supplier if any question.